
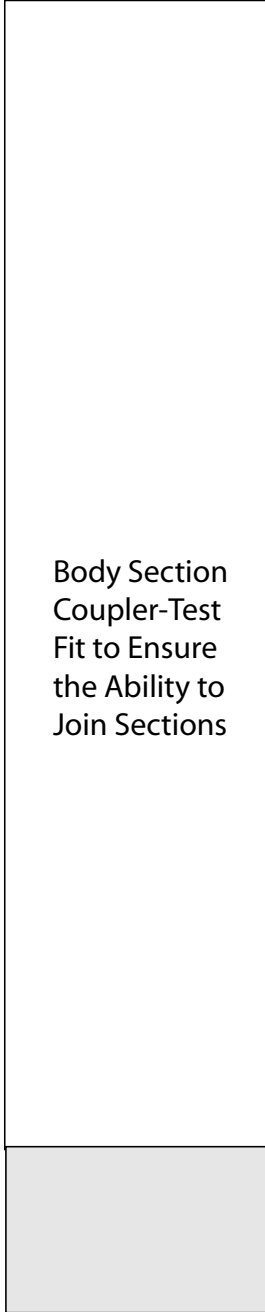
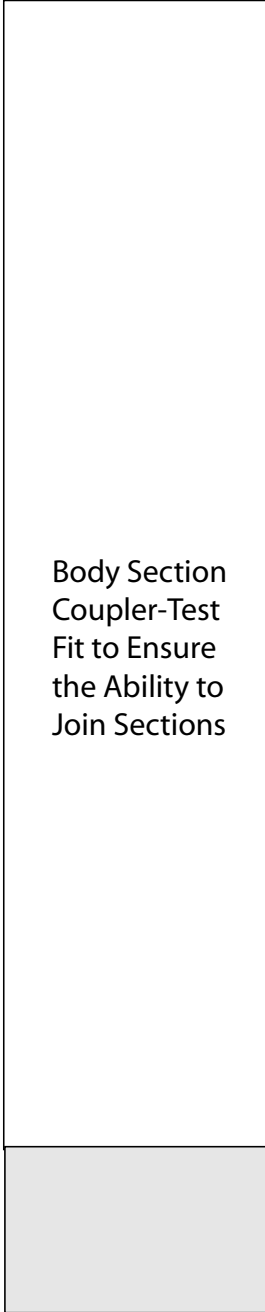
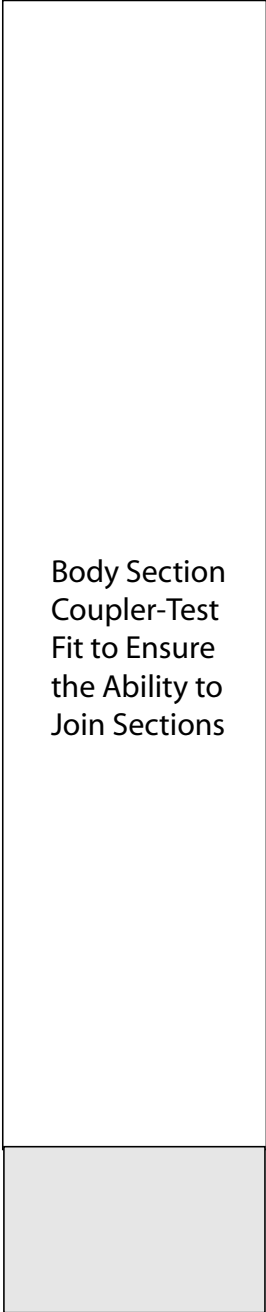


Cut centering rings from heavy cardstock and glue into each end of the body tube sections. They should be placed at least 3/4" in depth to allow section couplers to fit properly. Remember, test fit parts first, then glue.

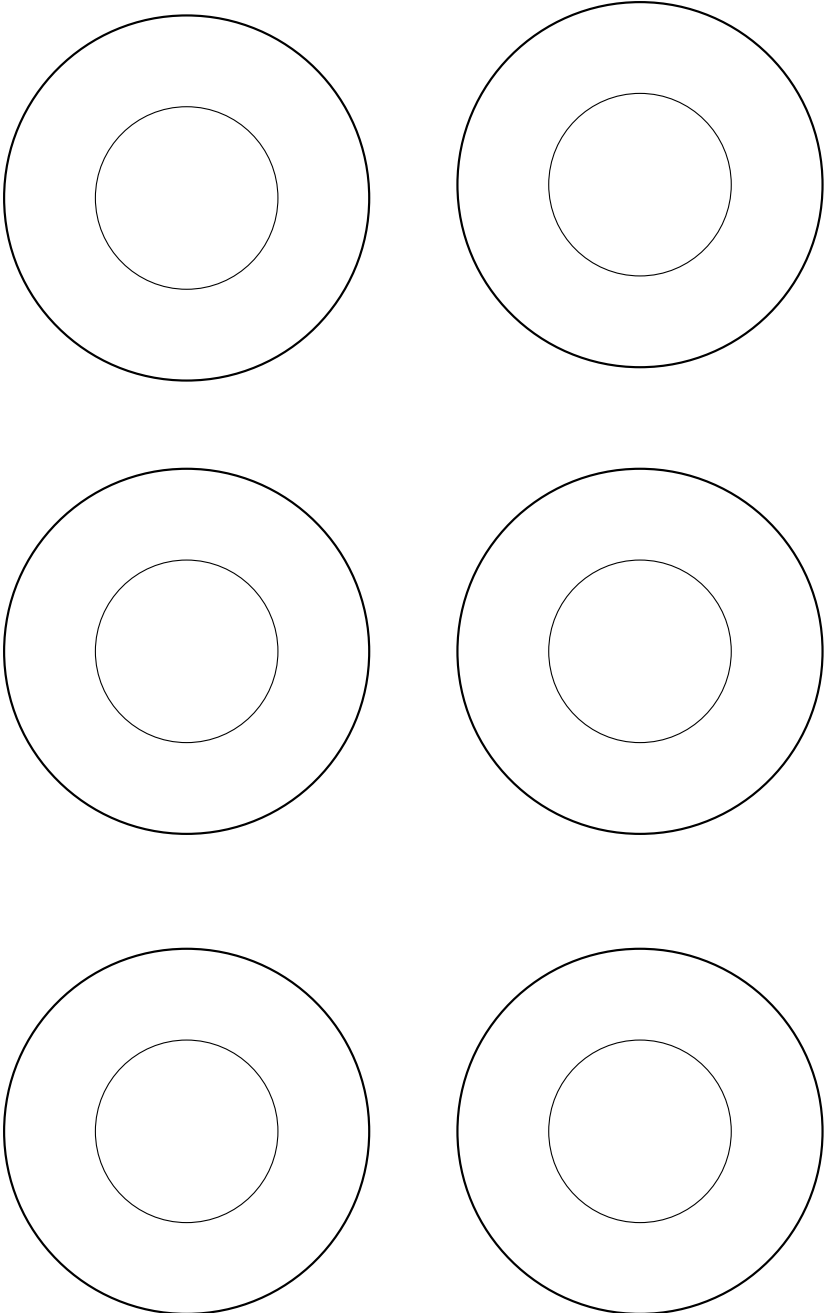

Body tube couplers and rings